


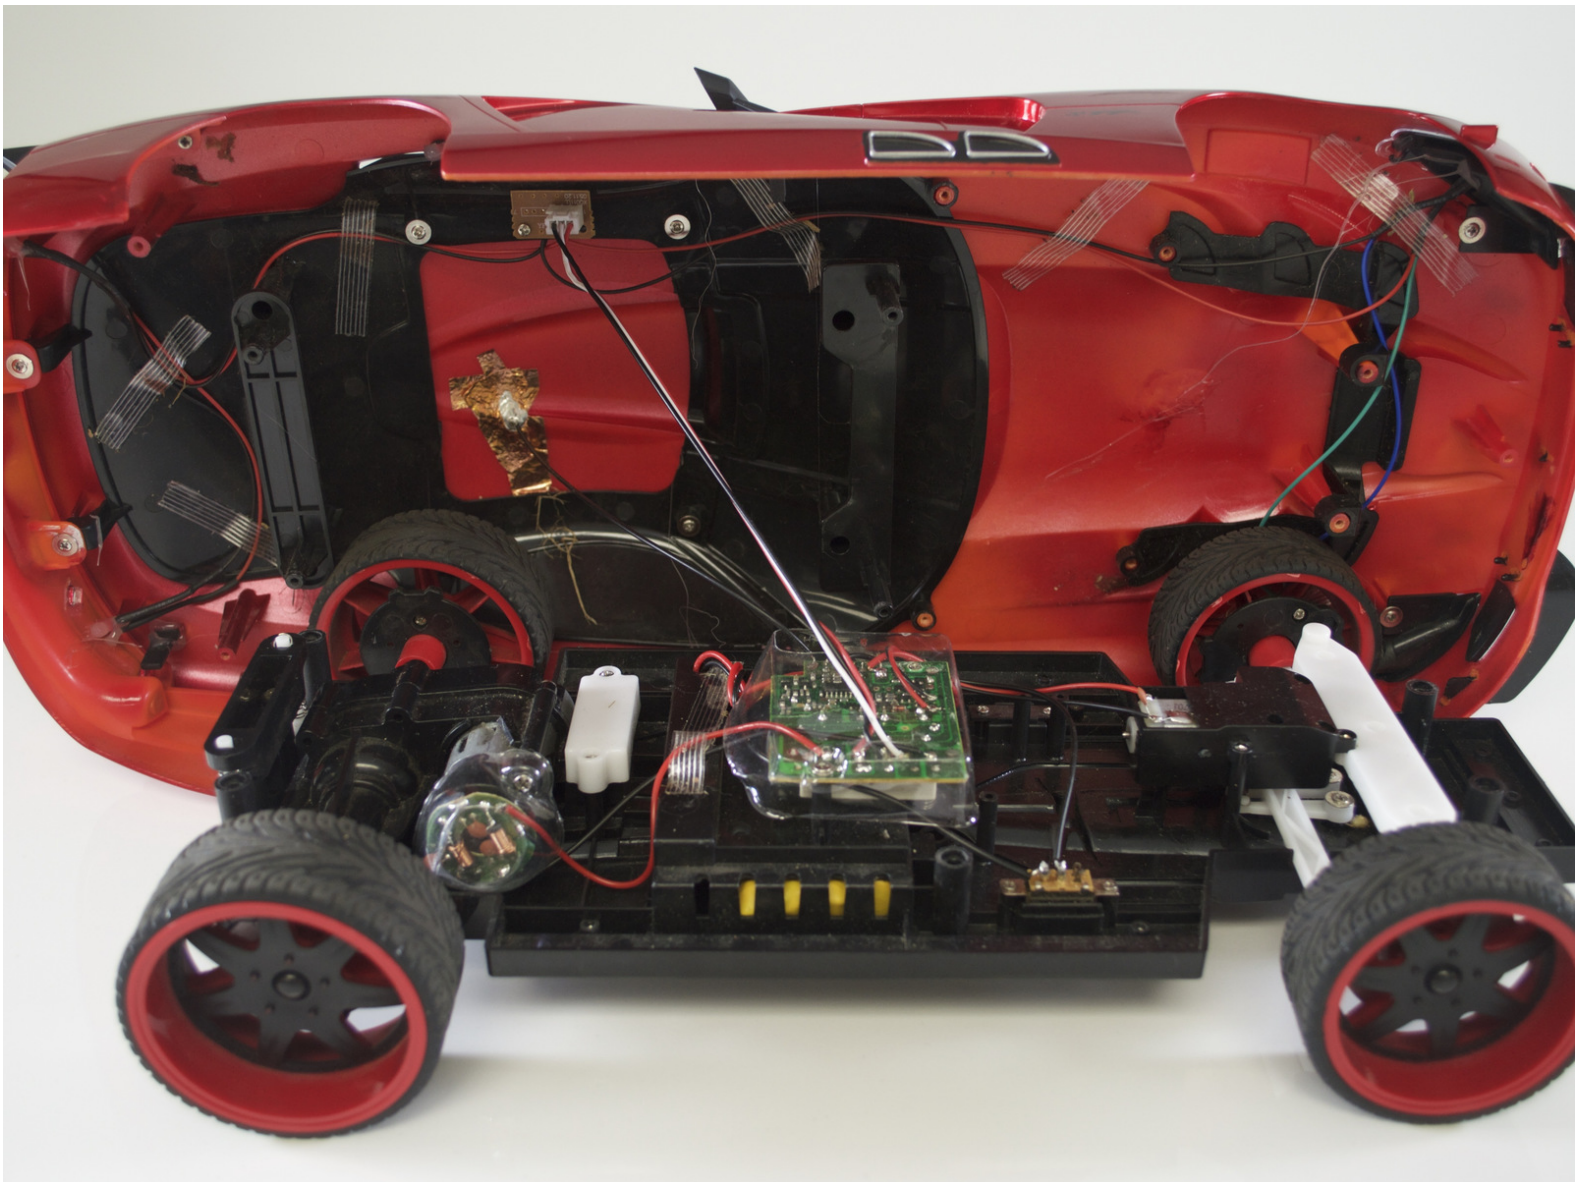

X-Street STR Viper

This is a prerequisite guide to remove the underside panel which is necessary to complete our other guides.

Written By: slcombs



INTRODUCTION

This is a simple guide that will open up the car's insides and allow more access to the other parts of the car.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
-

Step 1 — X-Street STR Viper





- Remove the four 3 mm screws from the bottom panel using a 3 mm Philips #1 screwdriver.

Step 2






- Use the 3 mm Philips #1 screwdriver to remove the three 3 mm screws that connect the front panel with the main underside panel. Also remove the 6 mm front panel screw.
- Remove the bottom panel by pulling the plastic tabs from either side of the car.

Step 3

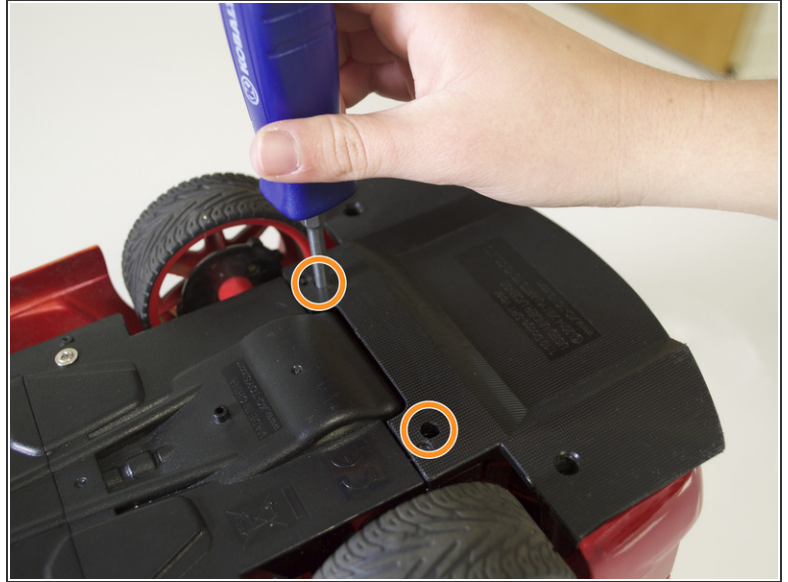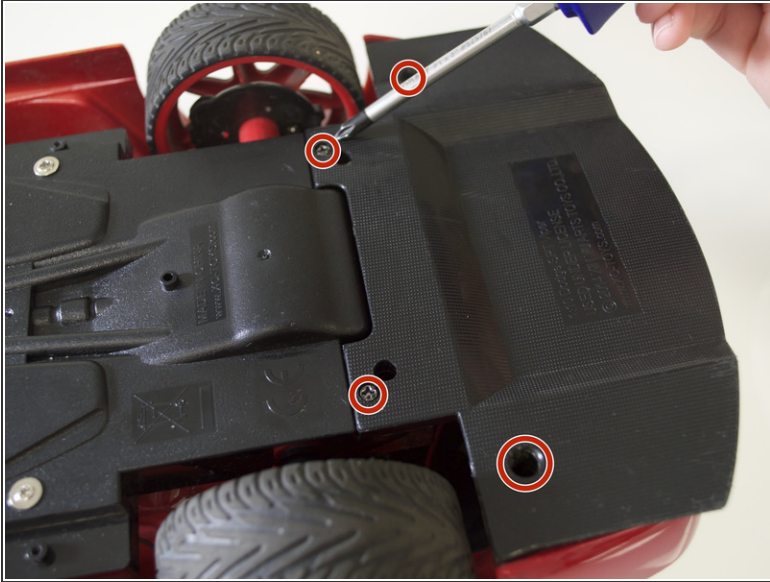

- Remove the two 6 mm screws and the two 3 mm screws that connect the back panel to the main underside panel.
- Remove the two 6 mm screws that connect the rear panel to the body of the car.

Step 4

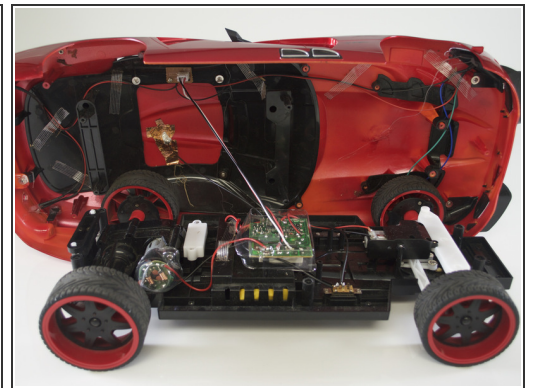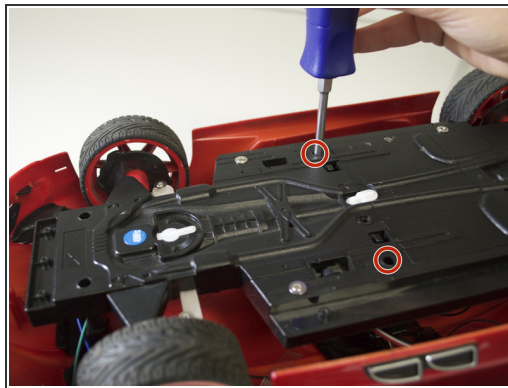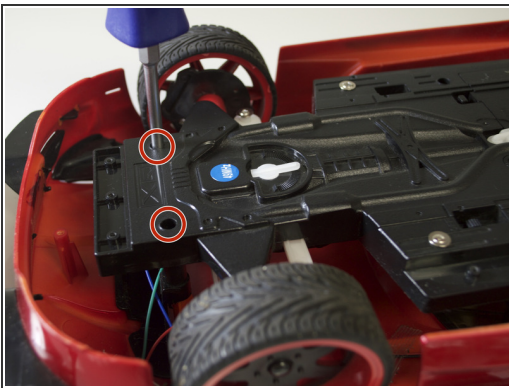

- Remove the two front 6 mm screws and the two middle 6 mm screws.
- ☑ Remove the main underside panel carefully. Excessive force could damage or disconnect the fragile wires attached to this piece.
- Remove the car shell and place it on the left side of the car.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-02 04:25:19 AM.